

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION: Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com



W362 Outlast Seat 8", W363 Outlast Seat 10" W364 Outlast Seat 12", W372 Outlast Bench 8" W373 Outlast Bench 10", W374 Outlast Bench 12"

Recommended Use

The Outlast Benches and Seats support many outdoor activities including seating and work surfaces, dramatic and loose parts play. Seats and Benches are wide and stable. Detached from the tables, they promote open ended play and unlimited arrangements. Handles in the center of the tops enable easy hauling. Use the sturdy benches and seats almost anywhere outdoors: at a picnic table, circled up for group gatherings, as balance beams, or for large muscle play. Available in Toddler, Pre-School, and Kindergarten heights.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Benches and seats are not designed to stack or nest.

⚠ CAUTION

- ▲ Benches and seats are heavy. Encourage cooperation to prevent injury.
- ▲ Adults are responsible to prevent Outlast Benches and Seats from being employed by children in unsafe combinations with other components.
- ▲ To prevent injury, caregivers and staff must familiarize themselves with these materials before giving children access to them.

Assembly

Benches and Seats come fully assembled.

If your shipment is incomplete, please call Customer Service.

Maintenance

Acetylated wood weathers a natural silver grey if left untreated outdoors.

If you prefer the original look, scrub with a bleach or detergent solution. When dry, apply a tinted, nontoxic penetrating stain, then apply a nontoxic mildewcide to minimize mildew growth.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service when any condition develops that might make operation unsafe.

Cleaning

Mud and dirt can be removed with scrub brush and water. Over time outdoors, surfaces may blacken with mildew. Remove with detergent or a bleach solution.

Construction

The wooden components are manufactured from long lasting acetylated wood and finished with a water based stain. All edges and corners are rounded for safety and ease of cleaning.

End grain is protected by plastic guards. Stainless steel hardware is used throughout and plastic components are formulated to ensure long life in outdoor environments.

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

