

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com



J640, J641, J642, J643 Child's Armchair

Recommended Use

This durable hardwood Armchair is designed for general childcare, classroom, or home use.



Child's Armchair

⚠ WARNING

- ▲ This product is intended for use by children of immature judgement; therefore, adult supervision is required at all times.
- ▲ Weight limit: Armchair: 250 lbs.

⚠ CAUTION

- ▲ For indoor use only. The Armchair is not waterproof.

Assembly

Your Armchair comes completely assembled and ready to use. Inside the carton are:

1. One Armchair, upholstered.
2. This product guide.

If your shipment is incomplete, please call Customer Service.

Maintenance

Periodically inspect for cracks, breaks, loose parts, loose screws, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make use unsafe.

Cleaning

Dust polyurethane upholstery weekly with a micro-fiber cloth to remove dust and dirt buildup. For everyday spills, immediately soak up with a dry cloth.

Wipe spill area with clean water (fabric is waterproof), or follow the cleaning instructions below.

Make a solution with warm water and a mild liquid detergent such as Ivory soap. Remove cushions and wipe them gently with a non-abrasive sponge, until the visible dirt is removed.

Rinse thoroughly with clean warm water and a non-soapy sponge. Make sure to get in the crevices of the fabric so that soap suds or dirt do not get lodged in small cracks or folds. Do not machine wash, or allow excessive water to enter through any openings, as seams are not waterproof. Wipe the surface dry with a lint-free towel.

To disinfect the cushion fabric, create a bleach solution using 1 part bleach to 10 parts water. Next, wash or wipe area with plain water, then with bleach solution. Let stand for 5 minutes and rinse with plain water and air dry. Hard surface cleaners, Quaternary Ammonia, Phenol, and Oxidizing based cleaners will damage the cushions. Follow all precautions listed on label.

The cushions are reversible.

Clean the wood with a damp cloth and a mild detergent. Too much water may harm the finish of the wood. For disinfection, use a mild dilution of ¼ cup bleach to 1 gallon water.

Construction

The wooden components are manufactured from durable hardwood with a clear nontoxic finish. All edges and corners are rounded for safety and ease of cleaning. The upholstery is urethane foam covered by polyurethane fabric, which meets the flammability requirements of Cal TB 117-2013. The J642 and J643 have an added flame blocker beneath the fabric, and meet the flammability requirements of Cal TB 133.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.