

# Product Guide

## User and Maintenance Information

**IMPORTANT INFORMATION:**  
Please save this product guide.

### CUSTOMER SERVICE:

#### United States

PO Box 2  
Ulster Park, NY 12487  
Office hours: 9-5 EST  
Phone (800) 777-4244  
Fax (800) 336-5948  
(845) 572-3468

www.CommunityPlaythings.com  
Sales@CommunityPlaythings.com



# G239 Changing Table Divider

## Recommended Use

The G239 Changing Table Divider is designed to be mounted on the back of the Community Playthings Changing Table. The clear plastic divider provides a physical barrier while still offering visibility of the room.

### ⚠ WARNING

- ▲ This product is intended for use by children of immature judgement. Supervision is required at all times.
- ▲ The Changing Table Divider's plastic hooks should only be used for the mesh bag accessory to store gloves or tissues. Do not hang other items on the hooks.
- ▲ Fully tighten knobs before use.

### ⚠ CAUTION

- ▲ For indoor use only. This product is not water-proof.

## Assembly

The carton you received contains the following:

1. Changing Table Divider
2. Two removable Plastic Clips
3. This Product Guide

If your shipment is incomplete, please call Customer Service.

## Operation

To install the Changing Table Divider, use two or more people.

1. Lift pan out of Changing Table.
2. Remove knobs from Changing Table Divider.
3. Place the bolts of the Changing Table Divider through the holes in the back of Changing Table.
4. Fully tighten the knobs securely onto bolts.
5. Replace pan in Changing Table.

## Accessories

The Mesh Bag accommodates most glove and tissue boxes. (H)10" x (W) 3-1/8" x (D) 5-1/4". The Mesh Bag hangs from the removable plastic clips on the Changing Table Divider.

## Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make use unsafe. Check periodically to make

sure that the Changing Table Divider is still securely mounted.

## Cleaning

Wooden Parts: Clean with soap and water. Too much water will harm the finish.

Plastic Parts: Dust with a soft, damp cloth or chamois. Wash with a mild detergent and plenty of lukewarm water.

Fabric: Spot wash with lukewarm water and a mild detergent, and allow to air dry. Machine wash in cold water and a mild detergent. Air dry.

## Construction

This product is made of solid maple with mortise-and-tenon construction. It is finished with a clear non-toxic finish. All corners are rounded for safety and ease of cleaning. The item has a clear acrylic panel.

The Mesh Bag is made from durable polyester fabric.

## User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

## Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

**Use only replacement parts supplied by Community Playthings.**

