

# Product Guide

## User and Maintenance Information

**Important Information:** Please save this product guide.

### Customer Service:

#### United States

PO Box 2  
Ulster Park, NY 12487  
Office hours: 9-5 EST  
Phone (800) 777-4244  
Fax (800) 336-5948  
(845) 572-3468

www.CommunityPlaythings.com  
Sales@CommunityPlaythings.com



# G236 Diaper Hamper

## Recommended Use

The Diaper Hamper is designed to handle a full day's work in a childcare facility. Disposal of soiled diapers is quick and hygienic with a child-safe, hands-free operation. A unique, double-sealing feature helps contain unwanted odors, keeping your infant room pleasant and welcoming.

### ⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ The hamper door should be closed and locked at all times except when changing the bag.

### ⚠ CAUTION

- ▲ For indoor use only. The Diaper Hamper is not waterproof.

## Assembly

The Diaper Hamper comes fully assembled. The carton you received contains the following:

1. Diaper Hamper
2. Shallow clear tote
3. This Product Guide.

**If your shipment is incomplete, please call Customer Service.**

## Operation

To dispose waste, depress foot pedal. Flaps inside the hamper hold the bag closed for odor control, but open briefly to let in waste after the lid fully closes.

The main lid is removable for changing the bag and cleaning. Open the door and pull the yellow release latch to remove the main lid. (The lid can be hung from front or side rim of item by yellow release latch during bag change)

Uses a standard 30-40 gallon light duty plastic trash bag. Recommended bag specification: Linear low density (LLDPE) trash bags, .7 to 1.1 mil.


Bags can be stored in the bottom compartment. Tote provided.

To insert a new bag, remove the main lid and push bag down through flaps. Lay mouth of bag into trough surrounding opening. Replace

the main lid. The mouth of the bag will be protected from getting soiled for easy removal.

To remove the bag, remove the main lid and tie the bag shut. Open the front door, pull the bag down through the flaps and remove from hamper.

The door has a child proof lock to allow for storage of items that should be inaccessible to children. The lock is operated by turning the latch 90°. A plastic key is provided for this, although any key, coin, or similar object will work as well.

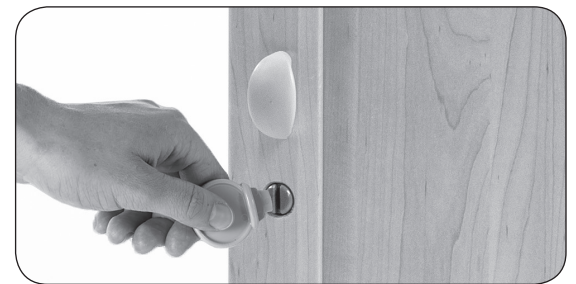

Child-proof lock on Diaper Hamper door

The Diaper Hamper can be connected to Community Playthings Roomscales posts, gates, panels, and furniture to restrict access to the changing area.

For more information on the Roomscales connecting system, see the Roomscales product guide F601 supplied by Community Playthings with every Roomscales order, or call Customer Service.

## Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Over time, the gas spring that activates the flaps may lose pressure. If this happens, call Customer Service for a replacement.

## Cleaning

Wooden parts: Clean with soap or mild detergent and water. Dry immediately. Leaving water or cleaning agents on the surface may damage the finish. Do not use solvent cleaners on any parts of your Changing Table.

Plastic parts: Clean with a mild detergent and water. Disinfect using wipes or a solution of up to 10% bleach.

### G236 Diaper Hamper

#### **Construction**

The wooden components are manufactured from solid maple and hardwood plywood, finished with a clear nontoxic finish. All edges and corners are rounded for safety and ease of cleaning.

#### **User Modifications**

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

#### **Ordering Parts**

The foam pads used in packaging this product are reusable/recyclable. If you would like to help us preserve the environment, dispose of them appropriately or return them to Community Playthings, US Rte. 40, Farmington PA 15437.

#### **Ordering Parts**

To order replacement parts, contact Customer Service with a description of the part(s) needed and the serial number of the product.

**Use only replacement parts supplied by Community Playthings.**

#### **Customer Service:**

##### **United States**

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

[www.CommunityPlaythings.com](http://www.CommunityPlaythings.com)

[Sales@CommunityPlaythings.com](mailto:Sales@CommunityPlaythings.com)

