

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com



G238 Accessory Shelf

Recommended Use

The G238 Accessory Shelf is designed to be used with the Community Playthings Changing Table. At the base of the shelf is a cradle that will accept an 18" wide paper roll.

The two shelves have slots to accept removable plastic dividers, creating up to 8 individual compartments. The back of the shelf is clear acrylic providing a physical barrier while offering visibility of the room.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgement. Supervision is required at all times.
- ▲ The Accessory Shelf's plastic hooks should only be used for the mesh bag accessory to store gloves or tissues. Do not hang other items on the hooks.
- ▲ Fully tighten knobs before use.

⚠ CAUTION

- ▲ For indoor use only. This product is not waterproof.

Assembly

The carton you received contains the following:

1. Accessory Shelf
2. Three removable Plastic Dividers
3. Two removable Plastic Clips
4. This Product Guide

If your shipment is incomplete, please call Customer Service.

Operation

To install the Accessory Shelf, use two or more people.

1. Lift pan out of Changing Table.
2. Remove knobs from the G238 Accessory Shelf.
3. Place the bolts of the G238 Accessory Shelf through the holes in the ends of Changing Table.
4. Fully tighten knobs securely onto bolts.
5. Replace pan in Changing Table.

Accessories

The Mesh Bag accommodates most glove and tissue boxes. (H) 10" x (W) 3-1/8" x (D) 5-1/4". The Mesh Bag attaches to the removable plastic clips on the Changing Table Accessory Shelf.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make use unsafe. Check periodically to make sure that the Accessory Shelf is still securely mounted.

Cleaning

Wooden Parts: Clean with soap and water. Too much water will harm the finish.

Plastic Parts: Dust with a soft, damp cloth or chamois. Wash with a mild detergent and plenty of lukewarm water.

Fabric: Spot wash with lukewarm water and a mild detergent, and allow to air dry. Machine wash in cold water and a mild detergent. Air dry.

Construction

This product is made of solid maple with mortise-and-tenon construction. It is finished with a durable, non-toxic finish. All corners are rounded for safety and ease of cleaning. The dividers are made of durable plastic. The back is made of clear acrylic.

The Mesh Bag is made from durable polyester fabric.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

