

Product Guide

User and Maintenance Information

Important Information:
Please save this product guide.

F242 Locking Low Storage Shelves

Recommended Use

These low, open Shelves provide storage space without obstructing windows and walls. The unit can be rolled easily on the concealed 2" casters.

⚠ WARNING

- ▲ The Locking Storage Shelves should be opened, closed, and moved by a responsible adult. Keep children's fingers away when closing to avoid pinching.

⚠ CAUTION

- ▲ For indoor use only. This unit is not waterproof.

Assembly

The F242 comes in two cartons containing:

1. The F24R Right Shelving Unit
2. The F24L Left Shelving Unit

If your shipment is incomplete, please call Customer Service.

To assemble the Storage Unit:

1. Remove the hinge pins from the F24R unit.
2. Slide both units together so that the hinges mesh.
3. Insert the hinge pins into the hinges from the top down.

Maintenance

Periodically inspect for cracks, breaks, and loose or missing parts. Remove the product from service when any condition develops that might make use unsafe.

Cleaning

Wipe the wooden parts with a damp cloth and mild detergent. Do not use excessive water.

Construction

The wooden components are manufactured from solid maple, finished with a clear nontoxic finish. All edges and corners are rounded for safety and ease of cleaning. Backs are nylon loop fabric laminated to a durable plastic backing.

Packaging Recycling

All our packaging is recyclable in two simple categories:

Packaging Materials	Recycling Category
Cardboard boxes and pads, newsprint	corrugated cardboard
Plastic wrap, sheet foam, foam pads	Plastic #4 LDPE

Please help us preserve the earth for the children and recycle at an appropriate facility.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact your Customer Center with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

Customer Service:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com

