

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION: Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com



A683 Sand & Water Legs, 33 in

Recommended Use

When substituted for the standard legs, these legs will enable wheelchair access to the Sand and Water Table.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

⚠ CAUTION

- ▲ Do not use the Sand & Water Table on a sloped or soft surface as it may make it unstable.

Assembly

The set of 33" legs comes in a single carton. The carton contains:

- Four legs, two with wheels.

To assemble, follow these instructions:

1. You may find it easiest to assemble the table upside down.
2. The wheeled legs should be attached at one end of the table with the wheels pointing forward.
3. If you find the wheels are pointing sideways, exchange the positions of the two wheeled legs.
4. Fit each leg onto a pair of bolts.
5. Tighten the knobs to secure the legs.

If your shipment is incomplete, please contact Customer Service.



Maintenance

Every six months check that the leg knobs are tight. Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Construction

The legs are made of solid hardwood with a clear nontoxic finish.

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.