

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com



Recommended Use

Recommended for children ages 1-8 years. This Sand and Water Table fills the need for a solid, durable, mobile place for Sand and Water play. Children will enjoy experimenting and playing with different materials.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Water is a drowning hazard. Do not leave pan of water unattended.

⚠ CAUTION

- ▲ Do not use the Sand & Water Table on a sloped or soft surface as it may make it unstable.
- ▲ Water on the floor is slippery. Clean up spills.
- ▲ Replace lid when Sand & Water Table is not in use, to conceal abrupt edge of pan.

Assembly

Equipment comes in a single carton. The carton contains:

1. Four legs, two with wheels
2. Table
3. Pan
4. Lid
5. Playshelf

If your shipment is incomplete, please contact Customer Service.

1. You may find it easiest to assemble the table upside down.
2. The wheeled legs should be attached at one end of the table with the wheels pointing forward.



Large Table

A631 Large Clear Table A632 Large Blue Table A634 Small Clear Table A635 Small Blue Table

3. If you find the wheels are pointing sideways, exchange the positions of the two wheeled legs.
4. Fit each leg onto a pair of bolts.
5. Note the two possible height settings.
6. Tighten the knobs to secure the legs.

Adjustments

To raise or lower the unit:

1. You may find it easiest to lay the table on its side or upside-down.
2. Undo the knobs attaching each leg, remove the leg and reposition on the other set of holes.
3. Tighten the knobs to secure the legs.

Operation

The lid provides a clean working surface when play is finished. It can also be used to span between two units. The playshelf can be used across the pan to support buckets, funnels or sandpies. The pan comes with a hose attached for easy drainage. Fittings are garden hose compatible. The fixed plug prevents solid material from blocking the hose. Dry wooden components after use.

Storage

The sand and water table and accessories should be stored indoors with the pan empty of water.

Accessories

Canopy fits on the large frame only.

Storage Rack mounts between the legs.

Flow Pan adds an extra level and water flow possibilities.

Extras Kit includes a length of clear hose, a funnel, a pulley and a mesh bag to further extend the play possibilities.

Spare Pan gives the option of using different pans for different media. A spare pan can also be purchased to replace a worn out pan.



Small Table

User and Maintenance Information (cont'd)

- A631 Large Clear Table
- A632 Large Blue Table
- A634 Small Clear Table
- A635 Small Blue Table

Maintenance

Every six months check that the leg knobs are tight. Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

The pan can be washed with soap or mild detergent and water. Disinfectants can be used. Do not use abrasive cleaners. Clean your table using a stiff brush and a minimum of soap and water. Let dry thoroughly. To reduce chance of hose blockage, if solids get into hose, flush out with plenty of water.

Construction

The frame, legs, and playshelf are made of hardwood with a clear, non-toxic finish. Corners are made of plated steel

The pan is made from blue PETG or clear PETG.

The hose is made of silicone with nylon fittings.

The lid is made from durable hardwood plywood with a clear nontoxic finish.

The plug is made of soft plastic.

Packaging Recycling

Please help preserve the earth for the children and recycle at an appropriate facility.

All our packaging is recyclable in two simple categories:

Packaging Materials	Recycling Category
Cardboard boxes and pads, newsprint	corrugated cardboard
Plastic wrap, sheet foam, foam pads	Plastic #4 LDPE

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

