


Product Guide

User and Maintenance Information

IMPORTANT INFORMATION: Please save this product guide.

Recommended Use

Your Round Filler is designed to be used with four Corner Shelf Units. The Corner Shelf Units should be the same height. This Filler is to cover the center hole which is formed when you fasten these units together as a free standing unit.. This creates a flat surface over the whole unit and keeps objects from falling into the opening.

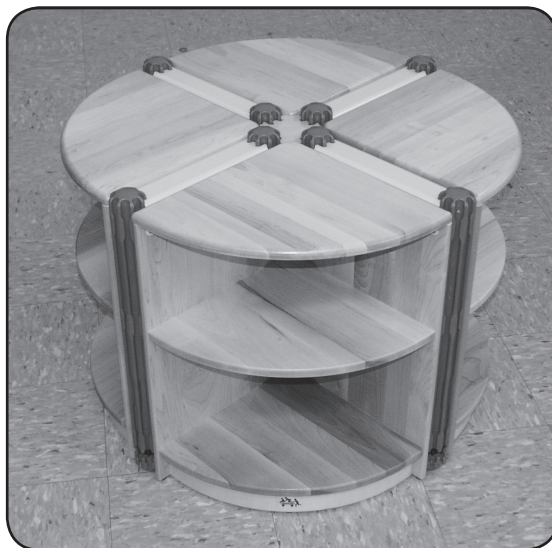

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ This accessory is intended for use on the following Community Playthings Products only: F671, F673, or F675

⚠ CAUTION

- ▲ For indoor use only. This product is not waterproof.

F750 Round Filler

Assembly

The carton you receive contains:

1. Your Round Filler
2. This Product Guide

If your shipment is incomplete, please call Customer Service.

Maintenance

Periodically inspect for cracks, breaks, or loose parts. Remove the product from service when any condition develops that might make use unsafe.

Cleaning

Clean the Round Filler with soap and water. Too much water will harm the finish.

Construction

This product is manufactured from durable hardwood plywood and finished with a clear nontoxic finish. All edges are rounded for safety and ease of cleaning.

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com

