

Product Guide

User and
Maintenance
Information

IMPORTANT INFORMATION:
Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com



C361 Stove
C362 Sink
C363 Refrigerator
C364 Cupboard
C365 Washer
C366 Play Dresser

Recommended Use

This unit will inspire the imagination of children from ages 3 and upward. It provides settings for role play where children can act out their perception of the world at work and play.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

⚠ CAUTION

- ▲ For indoor use only. These products are not waterproof.

Assembly

All Woodcrest furniture units come fully assembled.

If your shipment is incomplete, please call Customer Service.

Operations

Play dresser drawers are not removable. If an object falls behind the drawer, it will fall into the drawer below or out the bottom, and can be retrieved by moving the item to the side.

Accessories

F843 Mirror Cover (Fridge and Cupboard only.)
F681 Chalk Board Cover (Fridge and Cupboard only.)
F981 Half Tote (Play Dresser only)
F991 Quarter Tote (Play Dresser only)

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

Wooden Parts: Wipe with a damp cloth and mild detergent. Too much water will harm the finish of the wood. Dry wood components after use.

Chalkboard Cover: Occasionally, use a solution of warm water and a mild household dishwashing detergent. Do not use strong alkaline cleaners.

All Clear Plastic Parts and Mirror Covers: Dust with a soft, damp cloth. Wash with dishwashing detergent and plenty of lukewarm water. Use a clean soft cloth, applying only light pressure. Rinse with clear water and dry.

⚠ CAUTION

- ▲ DO NOT USE: Window cleaning sprays, or abrasive cleaners.

Loop fabric on backs: Remove stains with a common household detergent. Stubborn stains may be removed by shampooing with a household upholstery cleaner.

The Curtain is machine washable.

Construction

The wooden components are manufactured of durable plywood, solid hardwood, and coated with a clear wood finish. The Backs are nylon loop fabric, laminated to a durable plastic backing. Handles and slides are durable, engineered plastic.

Packaging Recycling

All our packaging is recyclable in two simple categories:

Packaging Materials	Recycling Category
Cardboard boxes and pads, newsprint	corrugated cardboard
Plastic wrap, sheet foam, foam pads	Plastic #4 LDPE

Please help us preserve the earth for the children and recycle at an appropriate facility.



Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

User Modifications

We are not responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com

