

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

Sales@CommunityPlaythings.com



J722, J724, J726 Bookbags for Woodcrest Chairs

Recommended Use

This book bag is designed to fit securely on the Woodcrest chairs to hold books and other items in a place convenient to your children. The mesh fabric lets you easily see what's inside. The velcro tabs hold the bag in place on the chair.

There are three sizes designed to fit the 12", 14", 16", and 18" Woodcrest chairs. Please note that on the logo label attached to each bag you will find a note indicating which chair model the bag fits.

⚠ CAUTION

- ▲ This accessory is intended for use on the following Community Playthings products only:
 - J722 fits the J712 12" chair
 - J724 fits the J714 14" chair
 - J726 fits the J716 16" and the J718 18" chairs
- ▲ Do not use these bags on other types of chairs. It may make the chairs unstable.

Assembly

Book bags are stocked in single packs and multi-packs. You may have received several different packaged quantities, so make sure they add up to the total quantity you ordered.

Each carton should contain:

- 1 The number of bags stated on the carton.
- 2 A product guide

The bags are ready to use. Simply slip them over the back of the chair and press the velcro tabs together through the hole in the chair's backrest.

If your shipment is incomplete, please contact Customer Service.

Construction

The **MESH** is polyester knit designed for high strength and durability.

The **EDGE BINDING** is coated polyester fabric treated for mold and mildew resistance.

ALL MATERIALS are non-toxic, nonallergenic, fire retardant and contain no latex.

Care & Cleaning

For a **QUICK WIPE OFF**, use a damp rag. The fabric is designed with cleaning in mind and most dirt should come off easily. A mild detergent or bleach solution may also be used as needed with no harm to the fabric.

For **MORE EXTENSIVE CLEANING**, we suggest you remove the bags from the chair to prevent buildup of residue under the bag and to speed up drying.

You may also **MACHINE WASH** your bags. Wash on cool cycle and drip dry.

INSPECT YOUR BAGS periodically for wear and tear. Remove from service if they no longer hold securely to the chair.

User Modifications

We are not responsible for modifications made by customers to our products, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.